Installation & Wiring Instructions

TLP/2/SP85/R High Voltage, High Output Remote Conversion Kit



PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Description:

The Liteplan range of TLP/2/SP85/R remote modules are designed to convert a wide range of LED types. The TLP/2/SP85/R converts most higher voltage LED luminaires and arrays. The modules are designed to be installed by breaking into the low voltage connection between the mains driver and the LEDs and allows the LEDs to be operated as normal under mains healthy conditions and operated at reduced light output in an emergency.


The modules automatically adjusts the output LED current to provide the best match between the battery and the load, providing maximum illumination whilst ensuring full battery duration and are compatible with a wide range of lighting. In some cases the TLP/2/SP85/R can be used to power some GU10 and mains fed lamps. Please contact the sales office for compatibility.

The unit will recharge the batteries after the test of clause 22.3 of BS EN 61347-2-7:2012.

The battery is fitted with a PCM to protect the supply voltage against reverse polarity.

Specification:

Input Voltage	230-240 Volts AC 50/60 Hz					
Power Rating (charging)	$3.9W - 21mA - \lambda = 0.77$					
Power Rating (standby)	$1.4W - 10mA - \lambda = 0.60$					
Insulation between supply & battery	Double Reinforced					
Duration	3-hours					
Ambient Temp. Ta	0°C to + 50°C					
Max Case Temp. Tc	70°C					
Max Battery Temperature	55°C					
Recharge Period	24-Hours					
Battery Type	6.4V 3.8Ah LiFePO4					
Charge Current	225mA Nominal					
Discharge Current	900mA Nominal					
Charge Voltage Limit	7.0 Volts					
Discharge Voltage Limit	5.0 Volts					
Ingress Protection	IP20					
Recharge Period	24-Hours					
Module Size (L x W x H)	320mm x 75mm x 31mm					
Module Fixing Centers	305mm					
Remote Weight	0.9Kg					

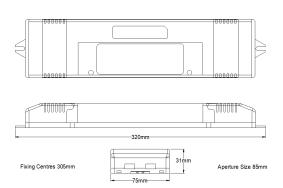

TLP/2/SP85/R

Prated - 4.4W Irated - 88-14mA Voltage Range 50 - 300 Volts Open Circuit Voltage (U-OUT) = 350 Volts

Warning

Avoid running the LED mains driver and emergency pack without the load connected. Failure to do so may result in damage to the LED array

Important

It is recommended that the module is installed by a competent person ensuring the installation complies with the necessary standards. Liteplan accept no responsibility for injury, damage or loss, which may arise as a result of incorrect installation, operation or maintenance.

The conversion requires an unswitched supply for charging the battery and a switched supply if the unit is being used for maintained operation.


ISOLATE BOTH MAINS SUPPLIES AND DISCONNECT THE BATTERY BEFORE INSTALLATION OR MAINTENANCE.

Installation

When converting a luminaire observe the following points:-

- Ensure that the module and battery pack will operate within their temperature ratings at their chosen loaction.
- 2. Ensure that the interconnecting loom is kept as short as possible.
- Ensure that the Permanent Live & Switched Live feeds are connected correctly.
- 4. Arrange the wiring to avoid running the 240 Volt cables next to the modules output to the LED to obtain the best EMC results.
- 5. Requirements for 'F' markings must be observed.
- Identify clearly the NEW Un-switched supply.
- 7. Ensure the LED Charge Indicator is clearly visible in every day use.
- 8. Connect the battery connector that can be found under the inspection cover.
- 9. This module is not intended for use in luminaires for high-risk task area lighting.
- 10. This module is protected against battery polarity reversal.

Tel +44 (0)1708 372223 | www.liteplan.com | customerservice@liteplan.com | RM3 0AP. UK

 








Installation & Wiring Instructions

TLP/2/SP85/R High Voltage, High Output Remote Conversion Kit



PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Typical Conversion Wiring Diagram

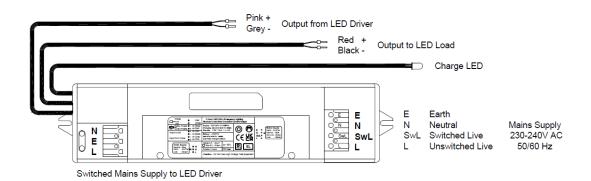

Testing/Commisioning:

- Ensure the load is connected.
- Connect the battery.
- Switch on the Unswitched Supply Check the Charge LED illuminates.
- Switch on the Maintained Supply Check the LED illuminates as normal.
- Switch off the Maintained Supply.
- Switch off the Unswitched Supply Check the Charge LED extinguishes and the load LED illuminates at a reduced output.
- Enter the commissioning date on the Battery Pack. Switch on the Unswitched Supply

Luminaire Ref/Location		In Case	In Case of difficulty, contact the Installation Engineers:- Tel:							
Full Recharge Time 24 Hours				Duration 3 Hours			Lamp Type - LED			
				ROUTINE	TEST RECOR	RD	•			
	Year 1		Year 2		Year 3		Year 4		Year 5	
Monthly Test	Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Functional										
Three Hour										

Tel +44 (0)1708 372223 | www.liteplan.com | customerservice@liteplan.com | RM3 OAP. UK

Liteplan reserve the right to change colour, price or specification without prior notice





