

Installation & Wiring Instructions

PLP/2S/DA - High Output Bulkhead

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Description:


The PLP/2S/DA bulkhead is a robust IP66 luminaire which offers 1316 lumen in mains operation and 1001 lumen emergency operation.

The PLP/2S/DA is manufactured with an opal diffuser which casts the light well over a wide arc. The prismatic diffuser is designed specifically for high ceilings to maximise useful light at the floor. Ldt files in both mains and emergency operation are available, please contact the Liteplan sales office who will be happy to send them to you.

Specification:

Input Voltage	230-240 Volts AC 50/60 Hz
Power Rating Non-Maintained *	1.4W 12mA $\lambda = 0.48$
Power Rating Maintained	13.5W 67mA $\lambda = 0.84$
Ambient Temp.	0°C to + 35°C
Mains Input Terminal	0.5mm - 2.5mm
Battery Fuse	Internal to Module
Battery Discharge Current	900mA
Discharge Voltage Limit	5.0V
Ingress Protection	IP66
Battery Pack	6.4V 4.8Ah LiFePO4
Charge Current	225mA Nominal
Recharge Period	24-Hours
Width and Length	370mm 140mm
Depth	100mm
Side Cable Entry	20mm Knock Outs L&R
Rear Cable Entry	20mm Knock Out Centre
Overall Weight (maintained)	1.8Kg

* Following its initial charge the PLP/2S/DA will spend 90% of its operational life in standby mode

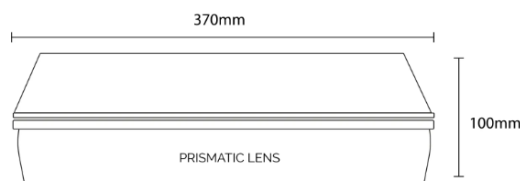

Product codes

PLP/2S/NM/DA
PLP/2S/M/DA

Non-maintained DALI Operation
Maintained DALI Operation

Important

It is recommended that this product is installed by a competent person in accordance with the current building and wiring regulations. Liteplan accept no responsibility for injury, damage or loss, which may arise as a result of incorrect installation, operation or maintenance.

The product requires an un-switched supply for charging the battery and a switched supply for maintained operation.

ISOLATE MAINS SUPPLIES AND DISCONNECT THE BATTERY BEFORE INSTALLATION OR MAINTENANCE.


Installation:

1. Remove the two front screws and lift off diffuser.
2. Remove the two screws on the hinged geartray and lift to reveal the components underneath.
3. Open your desired cable entry and feed mains cable through. Use the required IP rated gland to ensure that IP rating is maintained.
4. Connect the cables to the terminal block as shown in the diagram overleaf.
5. For Non-Maintained operation, do not connect to the Switched Live terminal.
6. Connect the battery.
7. Screw the geartray back into position ensuring no cables are trapped.
7. Refit the cover.
8. Fit the screws back into the diffuser making a water tight seal.

Installation & Wiring Instructions
PLP/2S/DA -
 High Output Bulkhead

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Typical Wiring Diagram

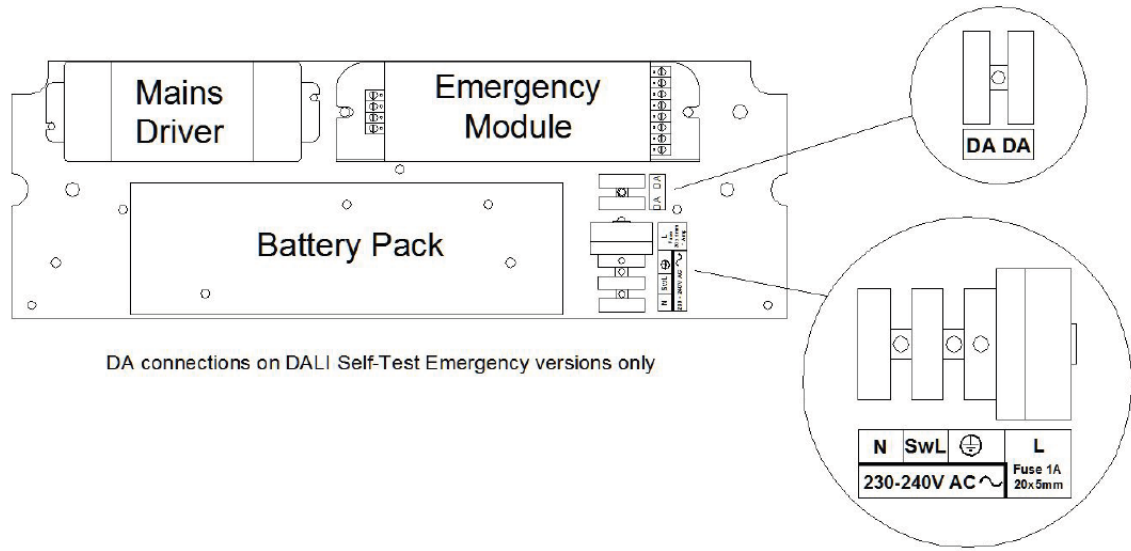

Device Status Indicator:

Green Solid		Battery connected & charging	Red Fast Flash 2 x 0.5 sec On, 2.5 sec Off	Lamp Fault
Green Flash	2.0 sec On, 0.2 sec Off	48h Pre-Commissioning	Red Slow Flash 0.5 sec On, 3.5 sec Off	Battery Fault
Green Flash	0.2 sec On, 2.0 sec Off	Function Test in progress	Red / Green Alternating	Identification Mode
Green Flash	0.2 sec On, 2.0 sec Off	Duration Test in progress	Red & Green Off	In Emergency Mode

Luminaire Ref/Location		In case of difficulty, contact the Installation Engineers:-									
.....		Tel:.....									
Full Recharge Time 24 Hours			Duration 3 Hours				Lamp Type - LED				
ROUTINE TEST RECORD											
	Year 1		Year 2		Year 3		Year 4		Year 5		
	Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date	
Monthly Test											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Three Hour											